

## UserManual

# SCALEREEO

## Wireless Foot Pedal



The FPW (Foot Pedal - Wireless) can be used to control the most important camera features of your SCALEREEO® system, if equipped with an adequate camera module. For details on your specific SCALEREEO® system, please refer to the documentation provided with the system.

## 1. Commissioning

### 1.1 Connection

- Connect the small FPW antenna with the designated socket at the rear side of your SPU.




### 1.2 Assigning / deleting a FPW

If the FPW was delivered together with your system, it is already assigned to it.

To delete or reassign a FPW,

- open the menu on your SCALEREEO system by using your ControlBar,
- select the tab "Footswitch",
- press "Add" or Delete" and shortly after tap once briefly any of the pedals of that FPW, which should be added or deleted.

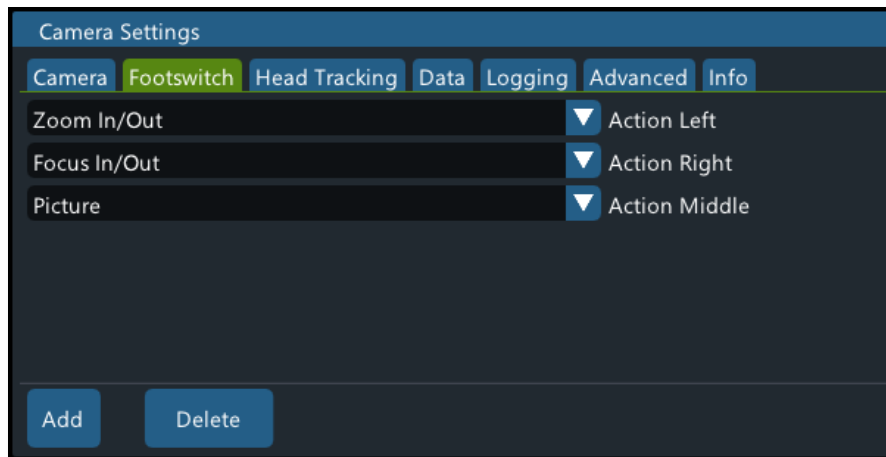

For each of the 3 FPW-pedals, one specific action can be assigned.

Therefor

- select one of the available actions for each FPW-pedal by using the ControlBar,
- confirm the selection with the middle button of the ControlBar.

## 2. Operation

- The FPW starts automatically when pressing any pedal on the FPW.
- After several minutes of inactivity, the FPW goes to StandBy mode automatically.
- Press the required FPW-pedal for more than ~0,5 sec to perform the action you assigned to it.
- To toggle between “double actions” (as Zoom In/Out), simply tap the button once briefly.

## 3. Maintenance

- The FPW needs a 9V block battery.
- To replace the battery, open the Battery compartment on the bottom side of the FPW.